


Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

Wireless Headphones

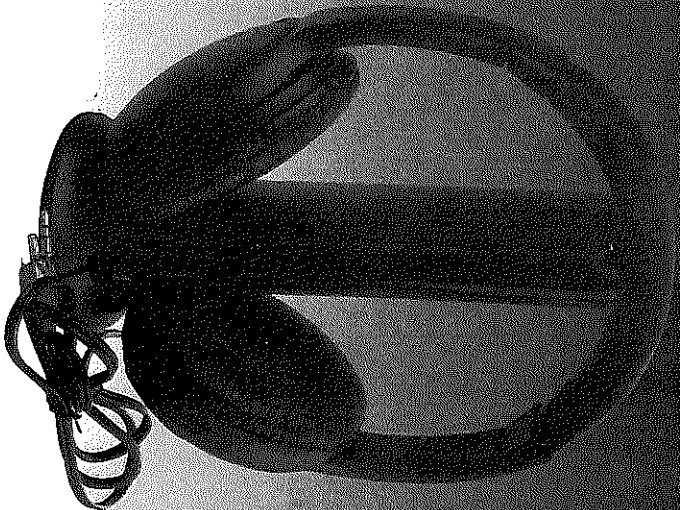

ITEM 60351

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: tech@harborfreight.com

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-800-444-3353 as soon as possible.

Copyright © 2012 by Harbor Freight Tools®. All rights reserved. This manual and any artwork contained herein may be reproduced in any form without the express written consent of Harbor Freight Tools. Improvements, actual product may differ slightly from the product shown herein. Tools required for assembly and service may not be included.

WARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

Specifications

Power Source	Headphones: 2 - AAA Batteries Transmitter: 2 - AAA Batteries Batteries sold separately.
Frequency	87 - 108 MHz

IMPORTANT SAFETY INFORMATION

1. This product is not a toy. Do not allow children to play with this item.
2. Use as intended only.
3. Inspect before every use; do not use if parts are loose or damaged.
4. Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
5. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Installation

1. Turn off the Headphones and Transmitter.
2. Slide open the Earpiece Battery Cover on the Left Earpiece.
5. Open the Base Battery Cover on the base of the Transmitter.

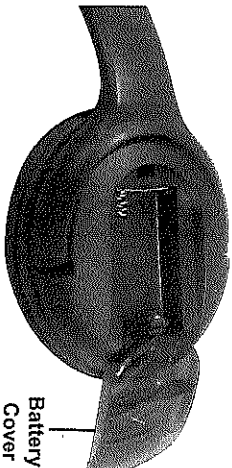


Figure A: Left Earpiece Battery Compartment

3. Insert 2 - AAA batteries (sold separately) in correct polarity.
4. Slide the Earpiece Battery Cover closed.
6. Insert 2 - AAA batteries (sold separately) in correct polarity.
7. Close the Base Battery Cover.


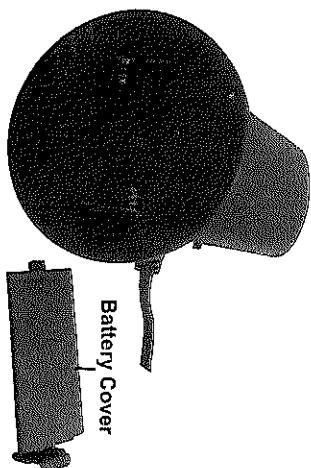


Figure B: Base Battery Compartment

Controls

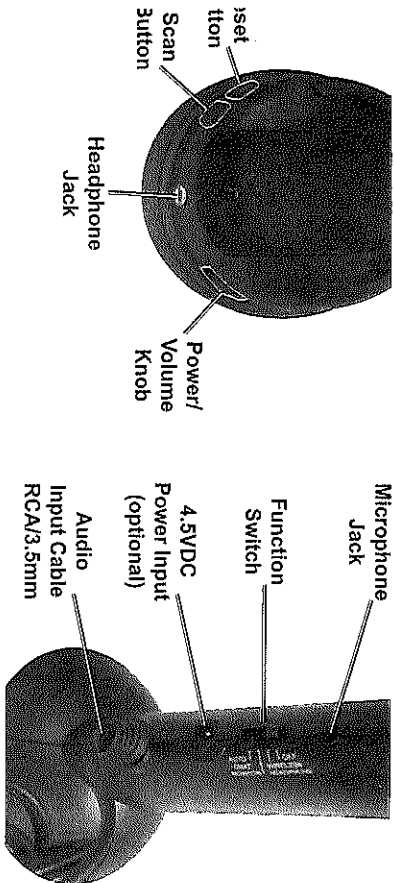

Operation Instructions

Wireless Headphones

- Place the transmitter in a high location.
- Connect the Audio Input Cable to your device's audio output jack.
- Turn the Function Switch to the desired setting.
- For Chat mode, connect a 3.5mm audio cable from the Microphone Jack on the Transmitter to the microphone input on your device.
- Turn the Power/Volume Knob on (clockwise), setting it at a low level at first.
- Once the sound comes through, adjust the volume level on your device and on the headphones as needed.
- Turn off the Headphones and Transmitter when done.

Radio Use

- Turn the Power/Volume Knob on (clockwise), setting it at a low level at first.
 - Press the RESET button to start scanning from the low end of the FM band.
 - Press the SCAN Button, located on the lower right hand side of the Right Earpiece to find the next higher FM station. Press again as needed. Adjust the volume as required.
 - Turn off the Headphones when done.
- ⚠ If sound is low or distorted, replace batteries.

Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Note: Internal replacement parts are not available for this item.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. **THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.**

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.